

# POWER ADAPTOR TRAVEL KIT



19974SP

# USER GUIDE

**Philex Customer Careline 08457 573479**  
(Local rate – UK only)

*Ideal for traveller's worldwide*

- For use with personal stereos, CD, MD and DVD players, electronic games and digital cameras.
- Selectable outputs: 3v, 4.5v, 5v, 6v, 9v, 12v.
- 6 output jacks supplied
- Output polarity reversible
- Short circuit protection
- 800mA maximum output

## Technical Data

Operating Voltage:  
100–240 Volts,  
50/60 Hz

Output Jack: 6 connector plugs

## For use in:

United States  
Australia  
New Zealand



**For use in:**  
Europe



# Safety instructions

1. Remove the adaptor from the mains supply before connecting to equipment.
2. Slide the red DC voltage selector to the correct setting required, as shown on the equipment.
3. Select the appropriate output jack required by your equipment and attach to end of adaptor lead. Insert into equipment.
4. Ensure the correct polarity. To identify the polarity of your equipment refer to the manufacturers instructions or the symbol located next to the DC socket.

*Example:* for devices with negative polarity, please connect the suitable jack so that the negative symbol appears in line with the word **TIP** on the end of the adaptor lead, as shown in the Polarity Diagram (*right*).

5. Insert the AC/DC mains adaptor into a standard 13 amp socket outlet. The LED will light, indicating that the adaptor is in use.


For indoor use only.

**Do** disconnect from mains supply before selecting a different voltage.

**Do** check correct polarity, or damage could result to your equipment.

**Do not** attempt to use with equipment with DC current exceeding the rating specified on the adaptor.

**Do not** attempt to open the adaptor housing, as there are no user servicable parts inside.

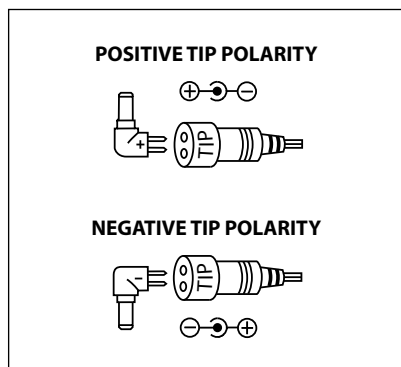

# Troubleshooting

Should the accessory fail to work:

- 1) Check that you have selected the correct voltage
- 2) Check that you have selected the correct polarity
- 3) Check that the accessory does not use more than 800mA
- 4) Check that the Travel Adaptor is properly connected to the socket.

The adaptor may become warm during use or emit a slight buzzing sound, this is quite normal.

If in doubt consult a qualified electrician.

*If problems persist, please contact*

**Philex Customer Careline: 08457 573 479**  
(Local rate – UK only)

**Technical Support: <http://technical.philex.com>**