

WARNING

Always switch off the mains supply before fitting, servicing or changing a lamp.


IF IN ANY DOUBT,
CONSULT A QUALIFIED ELECTRICIAN.

Do not cover the body of the fitting in the ceiling void with any material, such as cloth or paper.

Always ensure there is adequate ventilation around the fitting. The nearest illumination surface should be at least 0.5m from the front of the fitting.

FITTING INSTRUCTIONS

1. Cut a hole in the ceiling - see table below for correct diameter.
2. Squeeze spring clip together (A) and attach to one side of downlight (B).
3. Fit terminal block bracket and spring clip to opposite side (C).
4. Connect incoming mains supply (D).
5. Insert clips through hole in ceiling. Ensure mains lead is not trapped. Engage lower part of clip on outside edge of hole (E).
6. Push the fitting upward to "snap" firmly into position (F).
7. Connect lamp to lampholder. (Use GZ10 dichroic halogen lamps)
8. Use with enclosed Tungsten Halogen lamps only

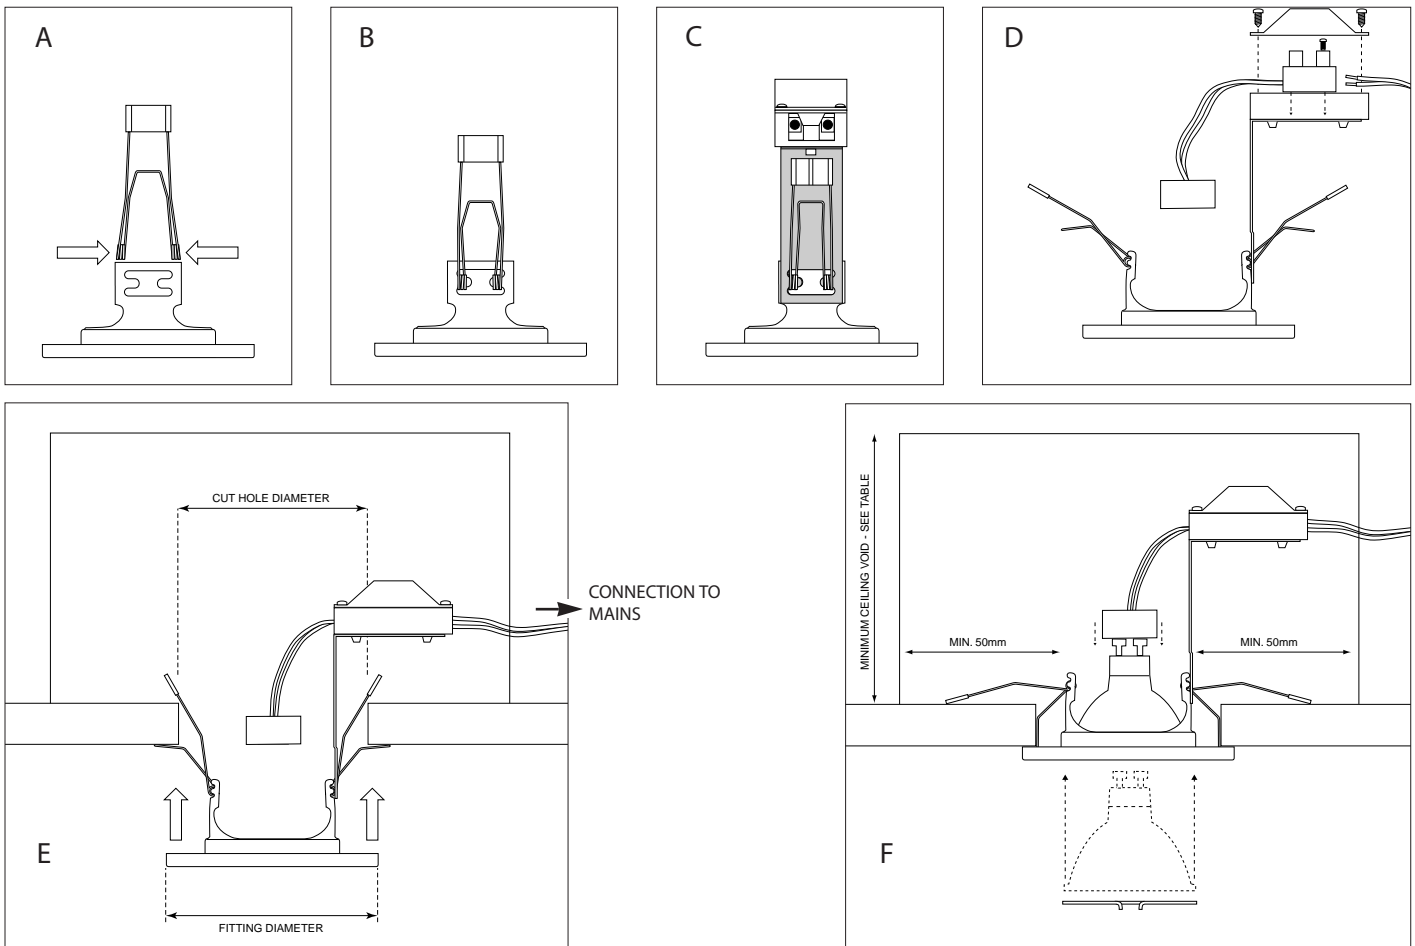

GZ10 MAINS RECESSED DOWNLIGHTS FITTING SPECIFICATIONS

Code	Type/Finish	Fitting diameter	Cut hole diameter	Minimum ceiling void
18920B	FLUSH FIXED/BRASS	86mm	73mm	105mm
18920BL	FLUSH FIXED/BLACK	86mm	73mm	105mm
18920C	FLUSH FIXED/CHROME	86mm	73mm	105mm
18920W	FLUSH FIXED/WHITE	86mm	73mm	105mm
18921B	WALL WASH/BRASS	89mm	83mm	110mm
18921BL	WALL WASH/BLACK	89mm	83mm	110mm
18921C	WALL WASH/CHROME	89mm	83mm	110mm
18921W	WALL WASH/WHITE	89mm	83mm	110mm
18922B	EYEBALL/BRASS	100mm	76mm	110mm
18922BL	EYEBALL/BLACK	100mm	76mm	110mm
18922C	EYEBALL/CHROME	100mm	76mm	110mm
18922W	EYEBALL/WHITE	100mm	76mm	110mm