

# SLxU and SLxA SET TOP AERIALS



27743R  
27744R

# USER GUIDE

Philex Customer Careline 08457 573479


## Setting up your aerial

1. Plug coax cable into aerial input on television.
2. Plug 13A plug into mains wall socket and switch on (Amplified version only).
3. Adjust rotating aerial to obtain best reception (*diagrams right*).
4. Adjust gain control on Amplified version to obtain best picture signal (*bottom picture*).




SLxU

SLxA  
Amplified version

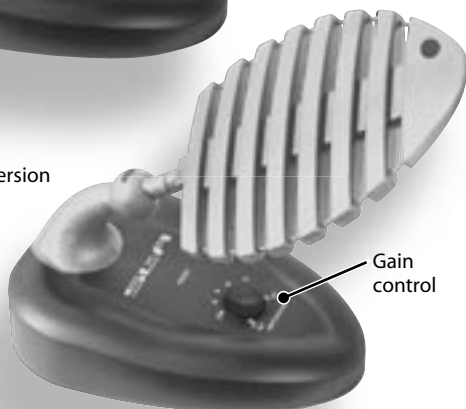

Gain  
control

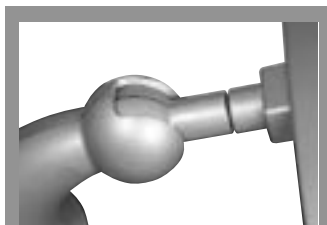

Fully adjustable aerial

# Troubleshooting

## 1. Poor Signal Strength

If the picture suffers from snowy grainy signal, adjust aerial to obtain best picture result or adjust Gain control on Amplified version.

## 2. Strong Signal Strength

If the picture suffers from herringbone pattern across screen, adjust Gain control to obtain best picture result.

3. Position Aerial Amplifier at greater or lesser distance from TV until optimum signal is received.

4. If LED on SLxA is not lit, check mains connection and fuse.